

Installation Guide


UPR - Universal Proximity Reader



1 Surface mount option - fixing and Installation

The Universal Proximity Reader should be fitted close to the door through which you wish to control access.


- a) Remove the front cover from the reader using a thin slot screwdriver
- b) Drill 2 holes into the wall for the self-tapping screws and 1 hole for the cable
- c) Thread the cable through the cable hole
- d) Fix the reader firmly onto the wall with 2 self-tapping screws
- e) Place the clipping front cover

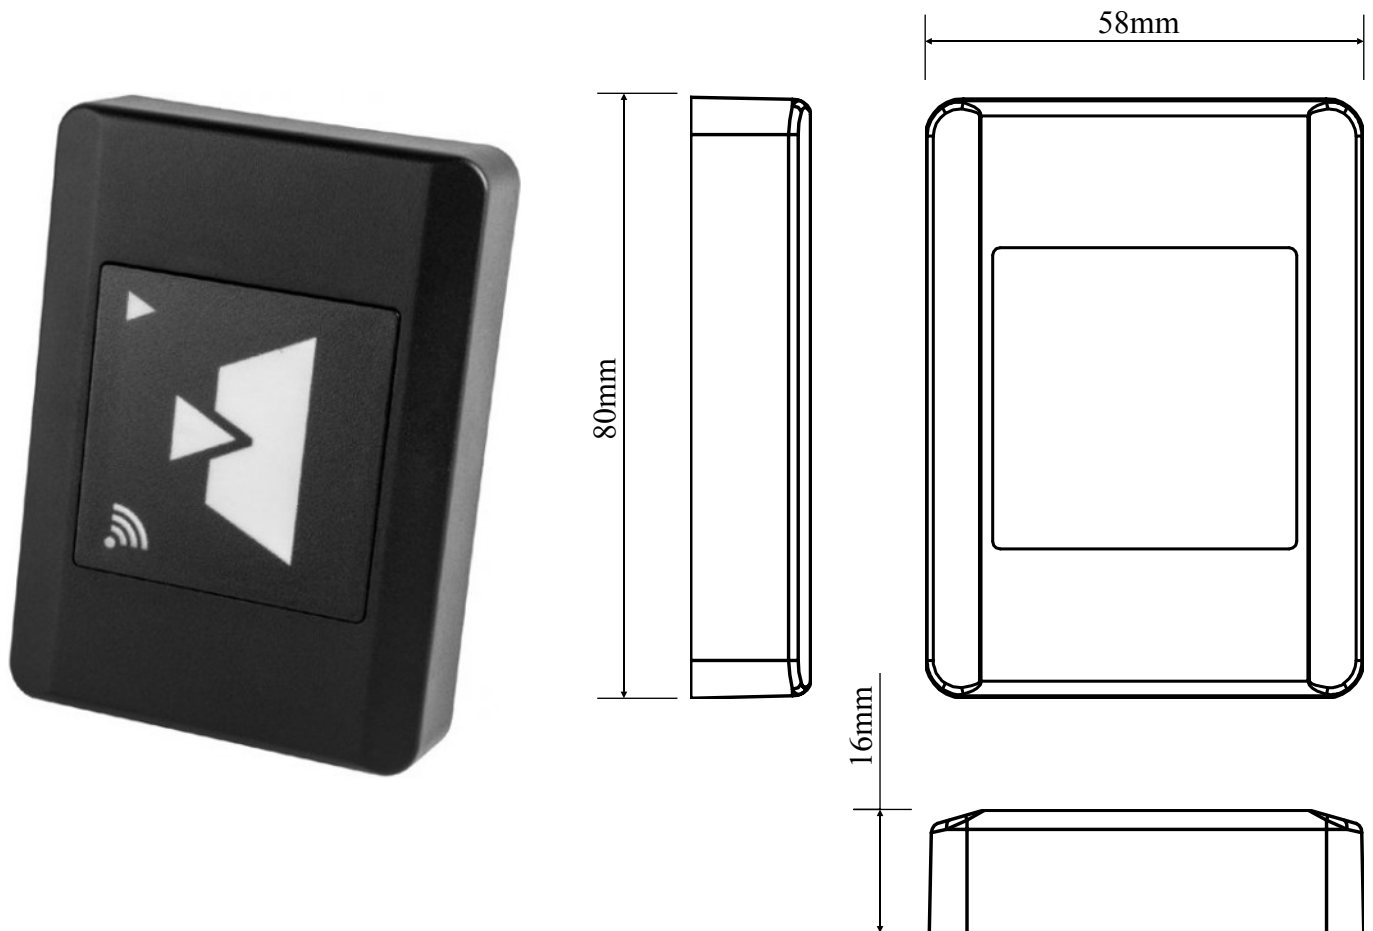

2 Panel mount option - fixing and Installation

The Universal Proximity Reader should be fitted inside a panel with 40mm x 40mm cutout

- Remove the front plate from the entry panel
- The reader should easily slide on to studs on 40mm x 40mm cut out
- Secure reader with fixings supplied with entry panel

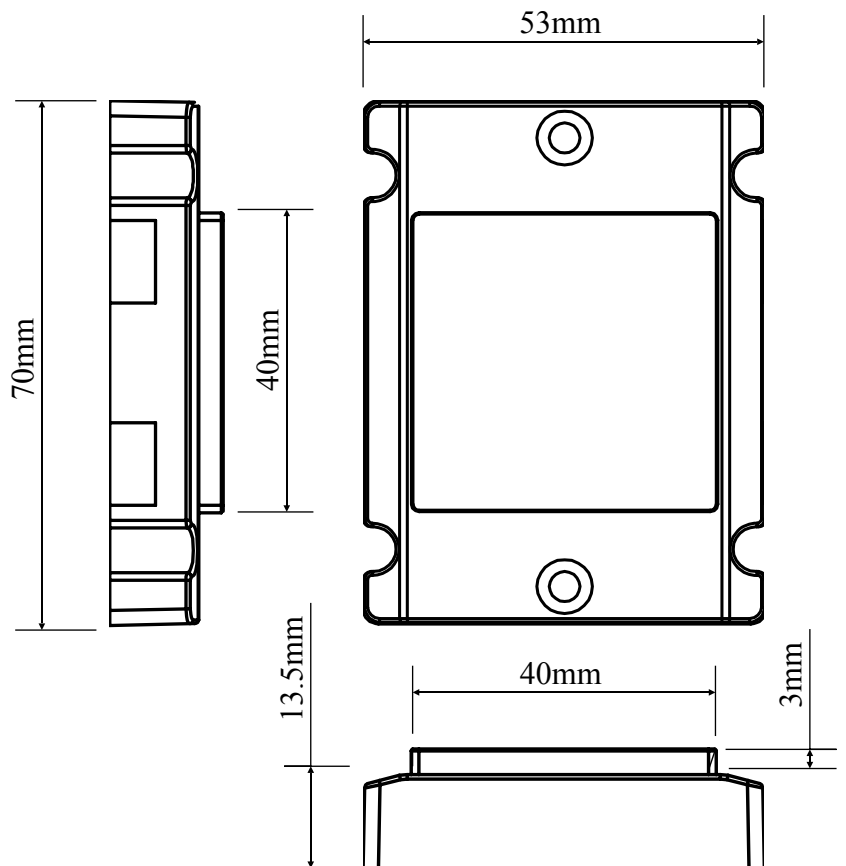

3 Connections Diagram

