

















# Wall mounted LINEA 2000 METAL entrance panel

342991-342992

## Description

Wall mounted 2-wire pushbutton panel with Zamak front cover, colour camera, and night viewing white LED light. One and two-family version available.

The camera can be swivelled by  $\pm -15^{\circ}$ , both horizontally and vertically.

It provides the possibility of opening an electrical door lock connected directly to clamps S+ and S- (18 V 4 A impulsive, 250 mA holding current). Blue LED backlit name plate


## **Related items**


346250 (gate release relay module)

#### **Technical data**

Power supply from SCS BUS: 18 - 27 Vdc Stand by absorption: 20 mA Max. operating absorption: 240 mA Operating temperature: (-25) - (+70)°C Pl against mechanical impact: IK07

#### **Dimensional data**

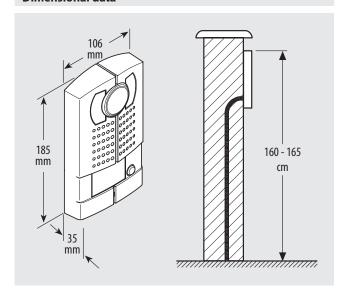

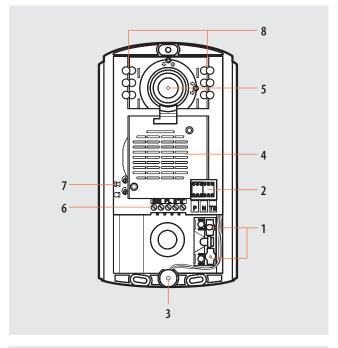

## Legend

- 1 Call keys
- 2 Configurator socket
- 3 Microphone
- 4 Loudspeaker
- ${\bf 5}$  -Colour camera with camera slant adjustment horizontally and vertically by  $\pm 15^\circ$
- 6 Clamps for BUS and door lock connection: the module allows to control an electric door lock directly connected to the clamps S+ S- (18 V 4 A impulsive - 250 mA holding current 30 0hm max)
- 7 Microphone and loudspeaker volume adjustment
- 8 White LEDs for night lighting

## Configuration

## The device must be configured as follows:

## P - entrance panel number

The configurator in seat P of the speaker module assigns to it a recognition number inside the system. The numbering of the entrance panels must always start from P=0. The entrance panel configured with P=0 must be a common (or main) entrance panel.

#### N - call number

Assigns the correspondence between the entrance panel pushbuttons, and the audio or video handsets.

In common entrance panels made using pushbutton modules, 1 must be inserted in N of the speaker module. In secondary entrance panels, the number of the first riser handset must be inserted in N.

## T - door lock relay timing

configurator number							
0= No configurator	1	2	3	4	5	6	7
4 sec.	1 sec.	2 sec.	3 sec.	as pushbutt.	6 sec.	8 sec.	10 sec.

## S - type of call signal

The configuration of S determines the call tone of the SPRINT handsets. One can thus differentiate the calls from different entrance panels.

Table for SPRINT handset call signal								
Configurator	0	1	2	3				
Type of bell	2-tone	2-tone	2-tone	One-tone				
	1200Hz	1200Hz	1200Hz	1200Hz				
	600Hz	0 Hz	2400Hz					

For the SWING, PIVOT, POLYX and AXOLUTE handsets, the **S configurator** associates the Entrance panel to the bell programmed in the same apartment. It is possible to chose between 16 different bells. In one-family systems **S=9 configure the general call**.