

Connecting SRS keypads for interlock operation

Note:

The door monitor and lock monitor should be closed circuit when the door is closed and the lock is locked. This energises the 9331 relay, which enables the keypad to function. ONLY USE CODES 11 - 30 AS THESE ARE SWITCHED On/Off BY THE **TM CLK** INPUT. The egress button is also inhibited if the other door is unlocked or open.

