 



Art.5118 Eclipse intercom

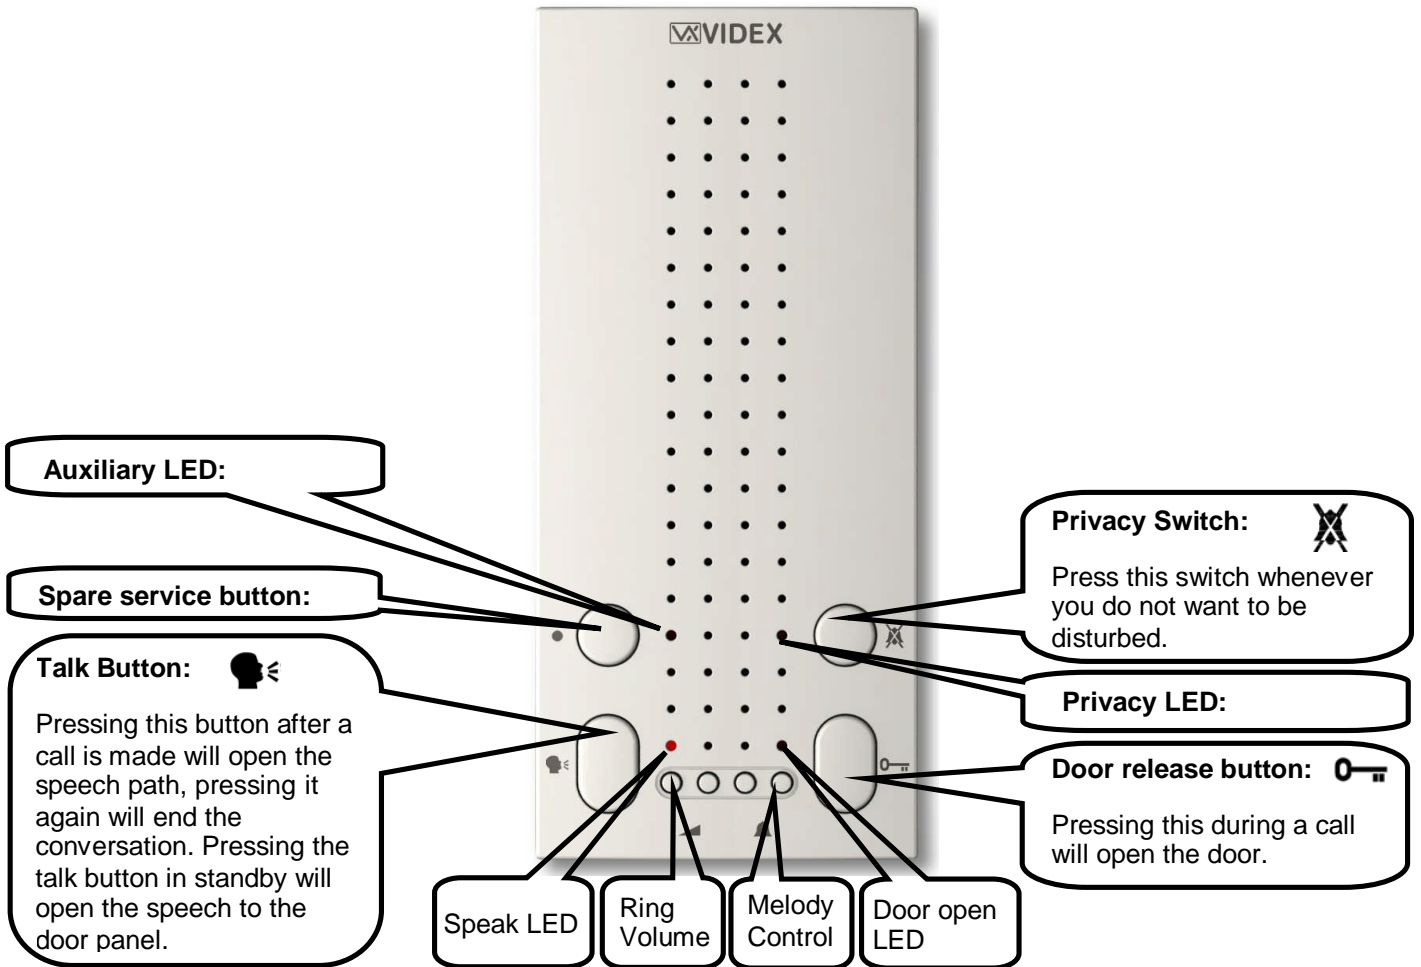


ANSWERING A CALL


STEP 1

 An incoming call will be signalled by an audible tone from the Eclipse audio intercom.

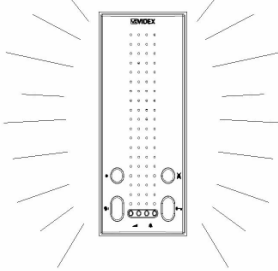



STEP 2

 
Press the talk  button once and speak with the caller, alternatively hold the talk button for 3 seconds to activate simplex speech. Then pressing and holding the button will allow speech to the door and releasing it will allow speech from the door.

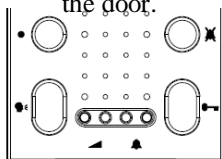

 STEP 3


To open the door press the  button.

 
To end the call press the  button.

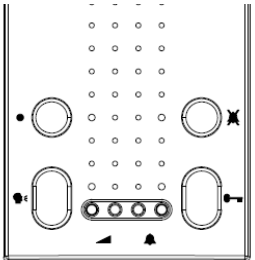


USING THE PRIVACY FACILITY


STEP 1

 To activate the privacy facility (ie. No calls will be received) press the  button. The privacy on LED will illuminate.

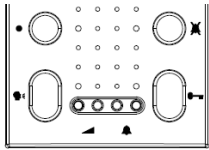


STEP 2

 To deactivate the privacy facility before the timeout period press the  button. The privacy LED will turn off.

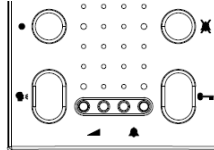


Adjusting the privacy time, call tone melody and number of rings:


Number of rings (factory preset = 6 ring):

- Press and hold the talk button “” (for approx. 10 seconds) until the unit emits a beep.
- Press the talk button as many times as the number of rings required. (ie. 5 presses = 5 rings, maximum of 9 rings.)
- Once the required number of rings has been reached wait 3 seconds for the exit beep.
- The new value is now stored.

Privacy time duration (factory preset = no time out):

- Press and hold the privacy button “” (for approx. 10 seconds) until the unit emits a beep.
- Press the privacy button again to set the privacy duration. Each time the button is pressed the privacy time duration increases by 15 minutes. (Starting from 0 up to a maximum of 20 hours ie. pressing the button 8 times gives a privacy duration of 2 hours.
- Once the required value has been reached wait 3 seconds for the exit beep.
- To set the unit so there is no time out on the privacy function enter the programming function by holding the privacy button for 10 seconds then simply release and wait 3 seconds for the exit beep.
- The new value is now stored.

Melodies programming (factory preset = melody 1):

- Press and hold the 2 melody buttons “” (for approx. 10 seconds) until the unit emits a beep.
- Press the melody button again (left or right) to listen to available melodies (maximum 9).
- When the chosen melody has been reached wait 3 seconds for the exit beep.
- The new melody will now be stored.