



# IDEX USER INSTRUCTION

# Art.5178 Eclipse intercom

 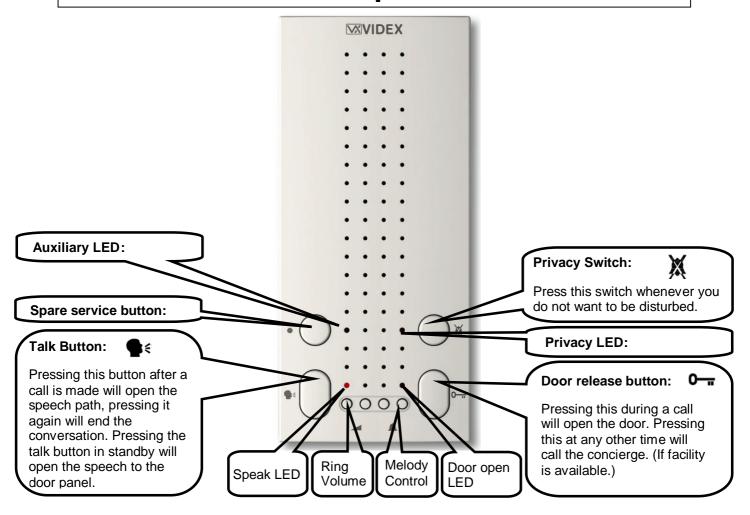


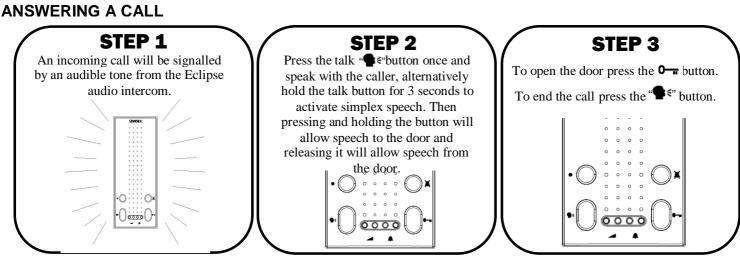

#### **CALLING THE CONCIERGE**


#### STEP 1

To call the concierge simply press the lock release button while no call is active on the intercom.




# STEP 2

An audible tone will be heard from the unit to confirm the call has been received.

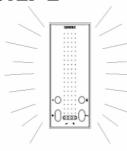

### STEP 3

When the unit rings again answer the call as described previously and you will be speaking to the concierge.

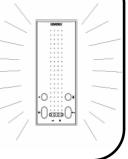


#### **USING THE PRIVACY FACILITY**

## STEP 1


To activate the privacy facility (ie. No calls will be received) press the button.

 The privacy on LED will illuminate.



## STEP 2

 To deactivate the privacy facility before the timeout period press the button. The privacy LED will turn off.



#### Adjusting the privacy time, call tone melody and number of rings:

Number of rings (factory preset = 6 ring):

- Press and hold the talk button " " (for approx. 10 seconds) until the unit emits a beep.
- Press the talk button as many times as the number of rings required. (ie. 5 presses = 5 rings, maximum of 9 rings.)
- Once the required number of rings has been reached wait 3 seconds for the exit beep.
- The new value is now stored.

Privacy time duration (factory preset = no time out):

- Press and hold the privacy button " X " (for approx. 10 seconds) until the unit emits a beep.
- Press the privacy button again to set the privacy duration. Each time the button is pressed the privacy time duration increases by 15 minutes. (Starting from 0 up to a maximum of 20 hours ie. pressing the button 8 times gives a privacy duration of 2 hours.
- Once the required value has been reached wait 3 seconds for the exit beep.
- To set the unit so there is no time out on the privacy function enter the programming function by holding the privacy button for 10 seconds then simply release and wait 3 seconds for the exit beep.
- The new value is now stored.

Melodies programming (factory preset = melody 1):

- Press and hold the 2 melody buttons " A " (for approx. 10 seconds) until the unit emits a beep.
- Press the melody button again (left or right) to listen to available melodies (maximum 9).
- When the chosen melody has been reached wait 3 seconds for the exit beep.
- The new melody will now be stored.