 


EN

USER  
MANUAL

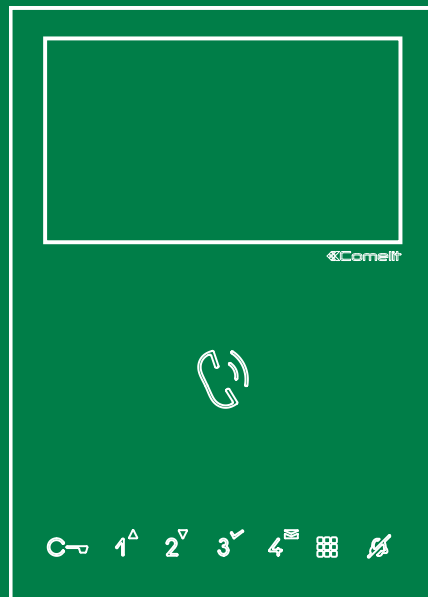

ViP Mini Monitor art. 6722W

 **Comelit**<sup>®</sup>  
Passion. Technology. Design.

# Warning

## Intended use

This Comelit product was designed for use in the creation of audio and video communication systems in residential, commercial or industrial settings and in public buildings or buildings used by the public.

## Installation

All activities connected to the installation of Comelit products must be carried out by qualified technical personnel, with careful observation of the indications provided in the Manuals / Instruction sheets supplied with those products.

## Wires

Cut off the power supply before carrying out any maintenance procedures.

Use wires with a cross-section suited to the distances involved, observing the instructions provided in the system manual.

We advise against running the system wires through the same duct as the power cables (230V or higher).

## Safe usage

To ensure Comelit products are used safely:

- carefully observe the indications provided in the Manuals / Instruction sheets
- make sure the system created using Comelit products has not been tampered with / damaged.

## Maintenance

Comelit products do not require maintenance aside from routine cleaning, which should be carried out in accordance with the indications provided in the Manuals / Instruction sheets.

Any repair work must be carried out

- for the products themselves, exclusively by **Comelit Group S.p.A.**,
- for systems, by qualified technical personnel.

## Disclaimer

**Comelit Group S.p.A.** does not assume any responsibility for

 
- any usage other than the intended use
- non-observance of the indications and warnings contained in this Manual / Instruction sheet.

**Comelit Group S.p.A.** nonetheless reserves the right to change the information provided in this Manual / Instruction sheet at any time and without prior notice.

# Table of contents

<b>Warning</b> .....	2	<b>Messages</b> .....	5
<b>Description of the monitor</b> .....	3	<b>Video memory</b> .....	5
Key functions .....	3	<b>Call divert</b> .....	5
Key to the indicator LEDs .....	3	<b>User setup menu</b> .....	6
<b>ViP Mini Monitor</b> .....	4	Language .....	6
Date and time settings .....	4	Keypad lock .....	6
<b>Functions available</b> .....	4	Information .....	6
Intercoms .....	4	Volume adjustment .....	6
Cameras .....	4	Backlight adjustment .....	6
Actuators .....	4	Melody settings .....	7
Doors open .....	4	<b>Installer setup menu</b> .....	7
Answering service setup .....	5	<b>NAVIGATION TREE</b> .....	7
Video memory .....	5		
Record always .....	5		

# Description of the monitor

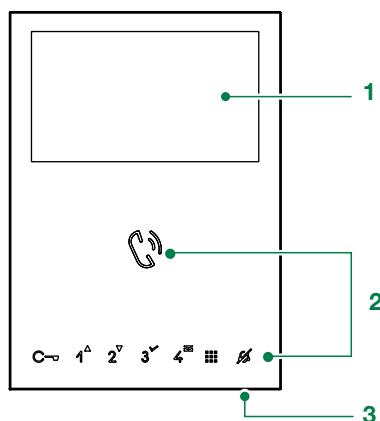

- 1. Monitor LCD 4,3"
  - 2. Soft-touch keys
  - 3. Microphone
- Built-in magnetic induction loop

## Key functions



### MENU

- ▶ SHORT PRESS: turns display on/off
- ▶ LONG PRESS (> 5s): access SETUP menu
- ▶ SHORT PRESS during menu navigation: call ESC function / previous window / monitor standby



### AUDIO

Allows you to answer incoming calls.

✓ *Incoming call:*

- ▶ Press to start the conversation
- ▶ Press again to interrupt the conversation
- » (\*) It is possible to resume the conversation for as long as the LED continues to flash
- ▶ LONG PRESS (10s): enable the Hands Free function (on receipt of a call the audio will be activated automatically)



### LOCK-RELEASE

- ▶ SHORT PRESS: open the door
- ▶ SHORT PRESS: implement the programmed function



### PROGRAMMABLE KEYS

- ▶ SHORT PRESS: implement the programmed function



### ARROW KEYS

- ▶ LONG PRESS during a call: increase /reduce audio volume
- ▶ DURING MENU NAVIGATION up / down / right / left



### CONFIRM SELECTION

- ▶ SHORT PRESS: confirm a selection, select / deselect an option
- ▶ LONG PRESS: Save setting



### MESSAGE MENU

- ▶ LONG PRESS (> 3s): access message menu



### PRIVACY/DOCTOR

- ▶ SHORT PRESS: activate / deactivate Privacy function
- ▶ LONG PRESS: (if enabled) enable / disable automatic door opening on receipt of call from external unit (*Doctor function*)

## Key to the indicator LEDs



- ▶ STEADY LED *in standby*: Hands Free function activated
- ▶ FLASHING LED: call in progress (\*)
- ▶ STEADY LED *in call*: in communication



- ▶ 1 FLASH: door open confirmed
- ▶ FLASHING LED: call in progress
- ▶ FLASHING LED (slow): door open



- ▶ STEADY LED: *Video memory / Call divert* activated
- ▶ FLASHING LED: signals presence in directory of a video message that has not been viewed







- ▶ 4 FLASHES: the device called is busy
- ▶ 3 FLASHES EVERY 5 SEC.: Doctor function activated
- ▶ STEADY LED: Privacy function active (Ringtone in silent mode)
- ▶ STEADY AND FLASHING LED: Doctor and Privacy active

# ViP Mini Monitor

The menu icons vary depending on the type of system installed and the functions available.

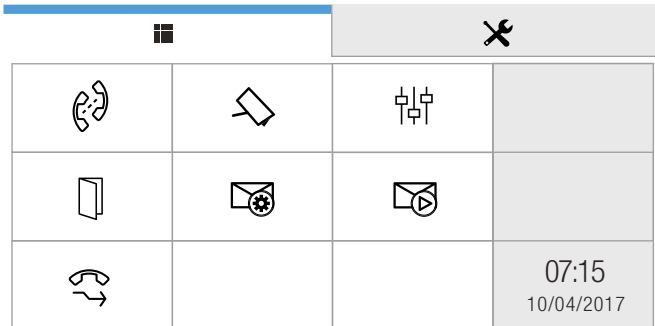 
- ▶ Press the soft-touch key  to access the display and view the main menu



- ▶ Scroll through the menu using the arrow keys 
- ▶ Confirm the selection by clicking on the tick symbol 
- ▶ Press Exit  to return to previous screen / turn off the display

## Date and time settings

 This function allows you to set the time and date of the device.

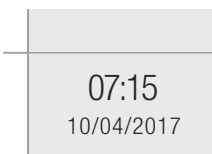

- ▶ Access the dedicated section



Set the desired values for day / month / year / hours / minutes.



Save the setting


# Functions available
 
## Intercoms

This function allows you to call addresses saved in the directory.




- ▶ Access the dedicated section, then select the device you wish to call from the directory

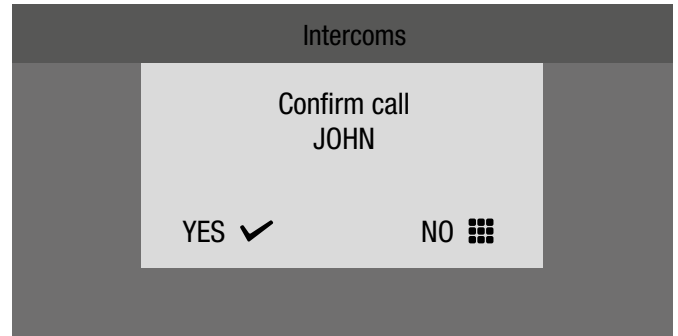

## Cameras

 
This function allows you to view a directory of cameras and to start live streaming.

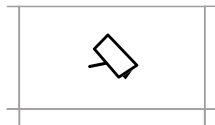

- ▶ Access the dedicated section, then select the camera you wish to interrogate from the directory

## Actuators

 
This function allows you to activate an actuator by selecting it from the programmed directory.

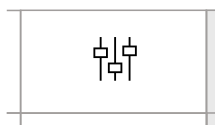

- ▶ Access the dedicated section, then select the command you wish to activate from the directory

## Doors open

 
This function allows you to view a directory of doors to check their status (open/closed).

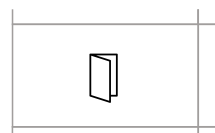

- ▶ Access the dedicated section to view the directory, then select the door to interrogate in order to start live streaming from the camera.

## Answering service setup

 This function allows you to manage the parameters for the device's video memory function.

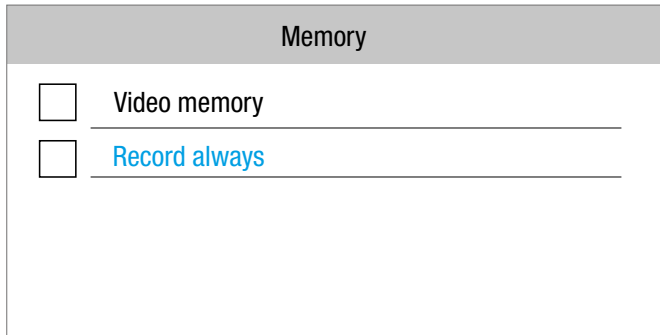

### Video memory

This function automatically starts audio/video recording in the event of no reply.

- ▶ Tick the box to enable the function
- » *The icon in the main menu changes colour*
- » *The soft-touch key LED illuminates (Steady light)*

### Record always

This function automatically starts audio/video recording on receipt of a call from an external unit.

- ▶ Tick the box to enable the function.



 
 
Both functions must be ticked

## Messages

This function allows you to access the ViP messaging system of the device.



- ▶ LONG PRESS (> 3s) to access the dedicated video memory submenu

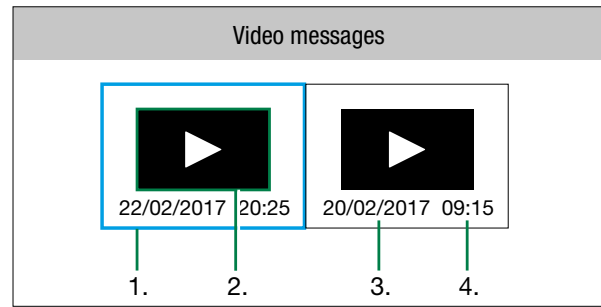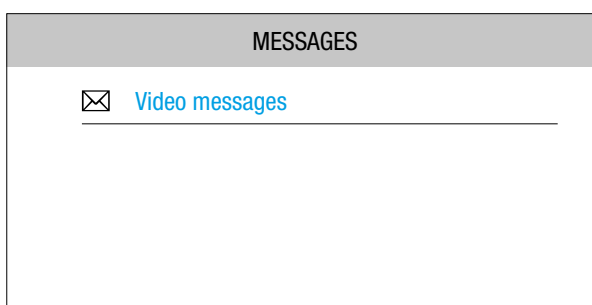

1. Selected video
2. Example of a previously viewed recording
3. Date
4. Time

- ▶ Click on the recording preview to START playback
- ▶ Click to STOP playback
- ▶ *Long press* to delete the video recording.

## Video memory

This function allows you to enable/disable the video memory on the device.



- ▶ Scroll through the menu to the icon and press to confirm and enable the function
- » *The icon in the main menu changes colour*
- » *The soft-touch key LED illuminates (Steady light)*

## Call divert

This function allows you to quickly enable/disable the call divert function.



 
- ▶ Scroll through the menu to the icon and press to confirm and enable the function
- » *The icon in the main menu changes colour*

# User setup menu




LONG PRESS (> 5s)

- ▶ Select *User setup menu* ✓
- ▶ Select one of the options in the list

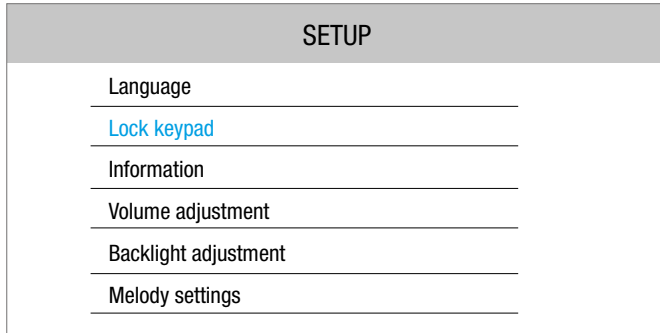

## Language

 
You can change the interface language.

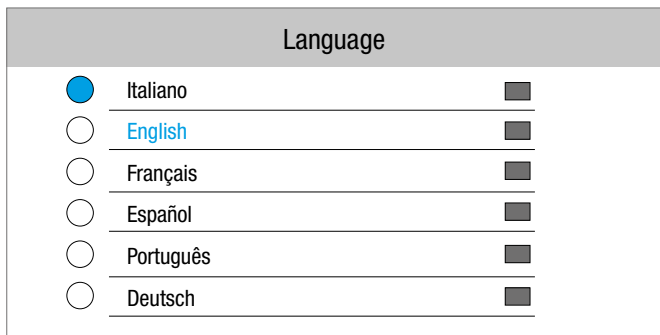

- ▶ Position the cursor on the desired option, then confirm the selection ✓ or exit

## Keypad lock

 
This function can be used to lock the device touch screen for 60 seconds for cleaning purposes.

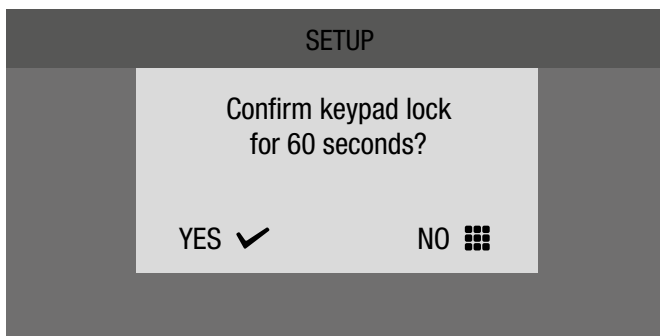

» After 60 seconds, the screen is unlocked automatically

## Information


 
This menu provides technical information about the device (e.g. type of device, versions, addresses, etc.).

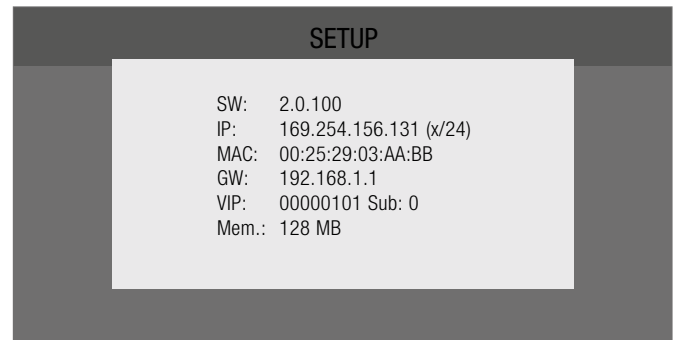

- Press the icon to exit the screen.

## Volume adjustment

  This menu allows you to manage and adjust the audio volume of the keys.

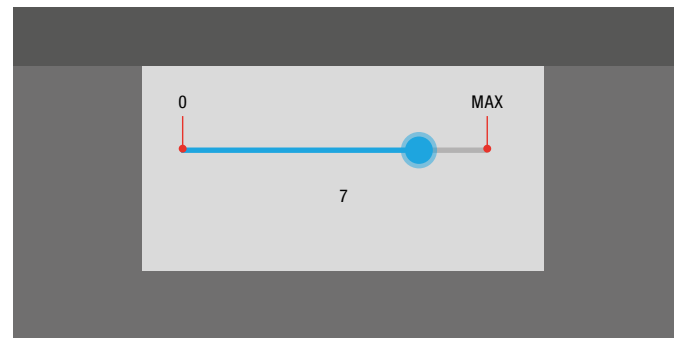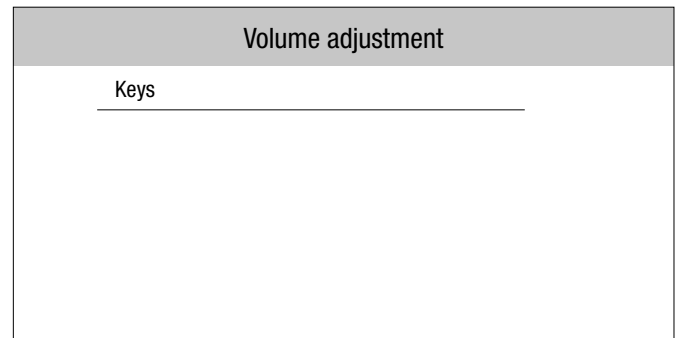



- ▶ Increase/decrease the value using the arrow keys ▲▼
- ▶ Confirm the selection by clicking on the tick symbol ✓
- ▶ Press Exit to return to previous screen

## Backlight adjustment

 It is possible to increase and reduce the monitor backlighting level.


# Installer setup menu

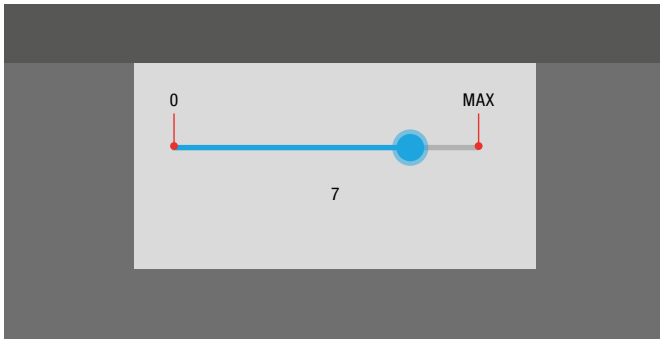


- ▶ Increase/decrease the value using the arrow keys ▲▼
- ▶ Confirm the selection by clicking on the tick symbol ✓
- ▶ Press Exit  to return to the previous screen

## Melody settings

 
From the menu you can choose a melody for each of the device's call functions.

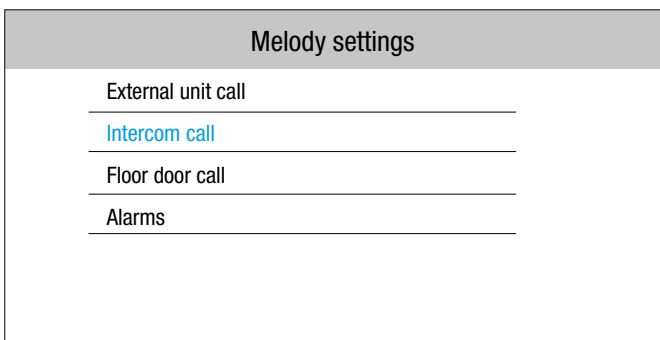

 
- ▶ Scroll through the options using the arrow keys ▲▼
- ▶ Press the tick symbol ✓ to access the submenu

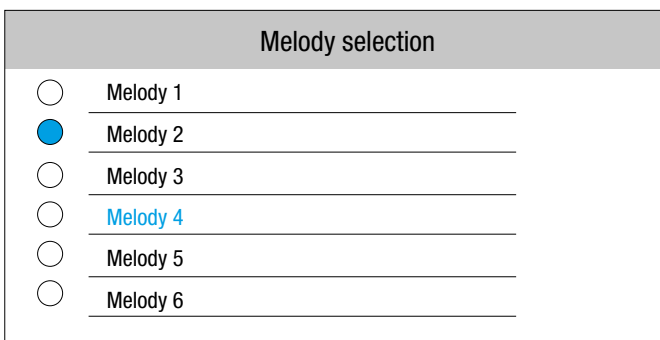

- ▶ Scroll through the options using the arrow keys ▲▼ to hear a preview of the melody and confirm the selection ✓

 LONG PRESS (> 5s)

 - ▶ Select *Installer setup menu* ✓
- ▶ Type in the password (default = 1111) and confirm ✓

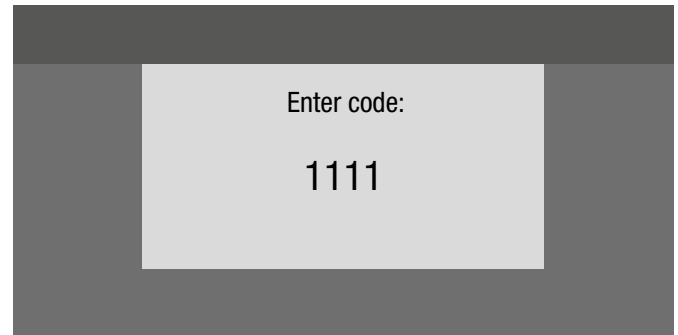



## NAVIGATION TREE

**INSTALLER SETUP MENU** .....

- Directories** .....

  - Intercoms .....
  - Actuators.....
  - Doors .....
  - Cameras.....

- Key programming**.....

  -  Lock-release .....
  - Actuator .....
  - Function disabled .....
  - 1234** .....
  - Intercom.....
  - Self-ignition.....
  - Alarms.....
  - Lock-release .....
  - Actuator .....
  - Function disabled .....
  -  Privacy / Doctor / Privacy Doctor / .....

- Total reset** .....
- Addresses** .....

  - VIP ADDRESS PROGRAMMING .....

- Set ringtone repetition** .....
- Set call times** .....

  - Awaiting reply .....
  - Talk .....
  - Intercom conversation .....
  - Reset wait time.....

- Call divert** .....

  - Activate timed divert.....

- Alarms** .....

  - Alarm .....
  - Panic.....
  - Fire.....
  - Priority call 4 .....

**For programming and configuration of the internal unit and the system parameters, use the ViP Manager software, which can be downloaded from [pro.comelitgroup.com](http://pro.comelitgroup.com)**

CERTIFIED MANAGEMENT SYSTEMS



[www.comelitgroup.com](http://www.comelitgroup.com)

Via Don Arrigoni, 5 - 24020 Rovetta (BG) - Italy

The logo features a green diamond-shaped icon composed of smaller diamonds to the left of the word 'Comelit' in a bold, sans-serif font. Below 'Comelit' is the tagline 'Passion. Technology. Design.' in a smaller, lighter font.