

## THE DAP JUMPER (DIRECT ACCESS TO PROGRAMMING)

If the Personal Master Code is forgotten, use the DAP jumper to override the forgotten code permitting the keypad direct entry into programming mode. Use this method to re-set the master code

- Displace the DAP jumper from OFF to ON position.
- Disconnect power supply.
- Reconnect power supply (tone sounds every second).
- Put the DAP jumper back to OFF position (tone is deactivated).
- The keypad is in programming mode and ready to receive new programming data.
- Press 0 Followed by new 4-digit master code followed by #.
- Press \* to exit programming mode.

### Location of DAP jumper

