

# INSTRUCTIONS

- Enter **MASTER CODE** and press \*

*Amber light will go solid*

- Enter **8 9 0 0 #**

*This will clear all codes and set to Single user mode*

- Enter **1** Followed by **NEW CODE**  
followed by **#**

*New code will be authorised*

- Enter **4 0** followed by **NUMBER**  
**OF SECONDS** followed by **#**

*Sets the number of seconds door should stay open*

*For gates skip this step*

- Enter \*

*Amber light will begin to flash and unit is ready for use*