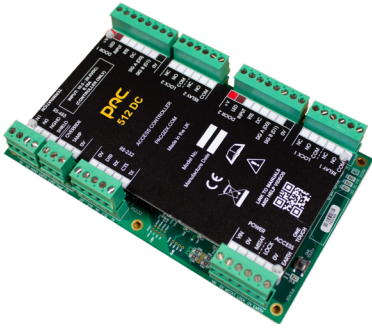


<p><b>Product Image</b></p>		
<p><b>Part Number</b></p>	<p>909030055 –PAC 512 DC Access Controller - DIN Mount 909030765 – PAC 512 DC Access Controller - PCB only</p>	<p>909030054 –Boxed PAC 512 DC Access Controller with 3 Amp PSU 909031074 – Boxed PAC 512 DC Access Controller in a Sarel Cabinet with 3 Amp PSU 909031076 - Boxed PAC 512 DC Access Controller in a Sarel Cabinet with 3 Amp PSU, GSM Modem Kit and Low Profile Aerial</p>
<p><b>Dimensions</b></p>	<p>W 181 x H 65 x D 125mm</p>	<p>Boxed - W 335 x H 335 x D 90mm</p>
<p><b>Operating Temperature</b></p>	<p>0°C to +35°C</p>	
<p><b>Operating Humidity</b></p>	<p>10% to 85% Relative Humidity</p>	
<p><b>Number of ID Devices supported</b></p>	<p>20,000</p>	
<p><b>Supported access control reader protocol</b></p>	<p>PAC PAC64 Wiegand</p>	
<p><b>Supported ID Device formats</b></p>	<p>PAC (Cards and Tokens) Key PAC (Cards and Tokens) Stanley (Tokens) PAC Ops Lite (Cards and Tokens) PAC Ops™ (Cards and Tokens)</p>	
<p><b>Number of doors supported</b></p>	<p>2 doors with up to 4 access control devices as per the following options:</p> <ul style="list-style-type: none"> <li>• An access control reader per door</li> <li>• An access control reader and Push To Exit (PTE) device per door</li> <li>• 2 access control readers per door (read-in and read-out)</li> </ul>	
<p><b>Configuration</b></p>	<p>via PC with PAC Access Central or Easinet software</p>	
<p><b>Event storage</b></p>	<p>20,000 events</p>	

Access Controller input devices	PAC readers (LF, HF, MT, Architect and Biometric) PAC PTE devices Door contacts Alarm inputs
Input connection features	1 x tamper alarm input 1 x override input 1 x RS-232 input 1 x RS-485 input 2 x Auxiliary Inputs
Output connection features	2 x Lock outputs 2 x Auxiliary Outputs
Distance to input devices	70m
Recommended Cabling	0.22mm 8 core alarm cable
Power input	10.5 – 28 V DC 50/60 Hz @ 350mA
Power outputs	2 x 5Amp @ 30V DC
Warranty	5 years against electronic failure
Standards Compliance	CE, RoHS & WEEE compliant
Boxed Product Contents	Installation guide