

User Guide, tabellet Apartment Station



Talk Button

Blue Flashing – Touch to start talking

Blue Steady – Indicates Speech is active



Camera Button

Blue Flashing – Touch to view the entrance, without speech

Yellow Steady – Touch to change the camera view (if available)



Mute Button

Touch to turn the ringer ON or OFF

Red Steady – Indicates Mute is ON: The ringer is silenced but the talk & camera buttons will still flash to indicate a call.¹



Key Button

Green Flashing – Touch to release the entrance door

Red – Indicates the entrance door has been left open

¹If a local Doorbell is installed, this will not be affected by the Mute function

tabellet User Guide (PD-301 issue 2)

Introduction

The tabellet is a hands-free video apartment station for use with the bell*free* door entry system. The unit has a 7" LCD display with 4 touch buttons on the right hand side.

Adjustment Controls

The user can adjust the display contrast, display brightness and the ringer volume using the touch controls and an on screen menu. To activate the controls during a call, touch and hold the Mute and Camera buttons at the same time; after 3 seconds all four buttons will be illuminated and the control graphics will appear on the display; The controls can also be activated while the unit is Idle (display blank) but there is no picture to see the effect of the adjustments

On Screen Display

The menu consists of a two panels, one to label the touch controls on the right-hand side and the other at the bottom, displaying the adjustment sliders:

Down Arrow: select an adjustment slider (highlighted Yellow)




Right Arrow: increases the value of the selected slider



Left Arrow: decreases the value of the selected slider



Large X: save the settings and turn off the controls

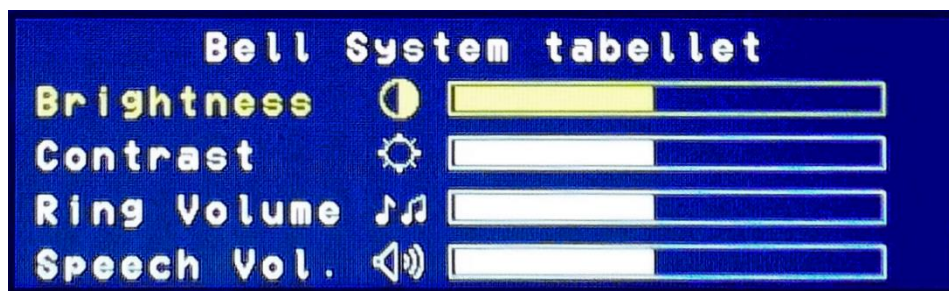

When adjusting the ring volume a short ring is given each time it is increased or decreased to give an audible indication of the volume.