

Quick Start Guide

BVP - Video access control Panel



1 Entering Administrator mode

The default Administrator Password is 999999. To enter the administrator mode, do the following

* 9 9 9 9 9 9 # (Flashing LED Bell button)

2 Entering Public original Password

The Public original password is set by default to **123456**. This will grant access by doing the following

1 2 3 4 5 6 #

3 Changing Administrator password

- Enter *Administrator mode* (see 1)
- Enter "0" to make administrator changes
- Enter "77" for administrator password location and press "#" to confirm
- Enter new 6 digit administrator password and press "#" to confirm
- Re-enter new 6 digit administrator password and press "#" to confirm
- Press "*" to finish programming

Example: 0 77 # XXXXXX # XXXXXX # *

4 Changing Public Original Password

- Enter Administrator Mode (see 1)
- Enter "0" to make administrator changes
- Enter "11" for public original password location and "#" to confirm
- Enter new 6 digit Public password and press "#" to confirm
- Re-enter new 6 digit public password and press "#" to confirm
- Press "*" to finish programming

Example: 0 11 # XXXXXX # XXXXXX # *

5 Perform a factory reset

- Enter Administrator Mode (see 1)
- Enter "0" to make administrator changes
- Enter "99" for factory reset location and "#" to confirm
- Enter "*" to finish programming

Example: 0 99 # *

6 Adding Card

- Enter Administrator Mode (see 1)
- Enter "1" for adding card location
- Enter "001" - "199" for card location and "#" to confirm
- Present card
- Press "*" to finish adding card
- Go back to step **b)** to add more cards or press "*" to finish programming

Example: 1 YYY # (PRESENT CARD) * *

7 Deleting a user (Missing Card)

- a) Enter Administrator Mode (see 1)
- b) Enter "2" for deleting a user location
- c) Enter location number of missing card and press "#" to confirm
- d) Press "*" to finish deleting user
- e) Go back to step **b)** to delete more users or press "*" to finish programming

Example: 2 YYY # * *

8 Deleting a user (Card present)

- a) Enter Administrator mode (see 1)
- b) Enter "2" for deleting a user location
- c) Present Card
- d) Press "*" to finish deleting user
- e) Go back to step **b)** to delete more users or press "*" to finish programming

Example: 2 PRESENT CARD * *

9 Delete All Users

- a) Enter Administrator Mode (see 1)
- b) Enter "2" for deleting a user location
- c) Press "88" for all users and "#" to confirm
- d) Press "*" to finish programming

Example: 2 88 # *

10 Changing Unlock Time

- a) Enter Administrator Mode (see 1)
- b) Enter "4" for unlock time location
- c) Enter "01" – "99" for number of seconds and "#" to confirm
- d) Press "*" to finish programming

Example: 4 05 # * (Door unlocked for 5 seconds)

11 Change Pin Using Card

- a) Enter *
- b) Read Card
- c) Enter old pin (Default is "0000" and "#" to confirm
- d) Enter new pin and "#" to confirm
- e) Re-enter new pin and "#" to confirm

Example: * READ CARD ZZZZ # NNNN # NNNN #

Note: to do this, you do not need to be in Administrator mode, but you need a card which has been added as described in step 6

12 Choosing Unlock Modes

There are 3 Unlock modes that can be used to gain entry. And here are how to choose the appropriate one

- a) Enter Administrator Mode (see 1)
- b) Enter "3" for unlock mode location
- c) Enter
 1. "00" for card only
 2. "01" for card or pin
 3. "02" for card and pinAnd press "#" to confirm
- d) Press "*" to finish programming

Example: 3 00 # * (For card only)
