 


CVK Keypad - programming



 **ATTENTION**

Factory Default Master Code is *1234
Flashing LED indicates programming mode
Press * to exit programming mode

Change Master Code

1. With the power off press and hold down * key
2. Connect power and continuous tone sounds
3. When the tone stops release the * key, wait 5 sec. for single 'BEEP' then enter new 4 digit Master Code
4. A five 'BEEP' confirmation tone sounds after new Master Code is entered.

Entering programming mode

1. Press * wait for double 'BEEP' tone, enter Master Code
2. Confirmation-Triple 'BEEP' tone sounds, LED start flashing
3. Press * to exit programming mode

Adding user codes

1. Enter programming mode (LED flashing)
2. Enter the location 01 to 40 (31-40 are latching locations) wait for double 'BEEP' tone
3. Enter the desired 4 digit User Code
4. Confirmation - Triple 'BEEP' tone sounds
5. To add more users follow points 1 to 4 or simply press * to exit programming mode

Delete a user directly

1. Enter programming mode (LED flashing)
2. Enter the location 01 to 40, wait for double 'BEEP' tone
3. Press # key to delete this location
4. Confirmation - Triple 'BEEP' tone sounds

Delete a code directly

1. Enter programming mode (LED flashing)
2. Press # key, wait for double 'BEEP' tone
3. Enter 4 digit User Code you want delete
4. Confirmation - Triple 'BEEP' tone sounds

 
Delete all codes

1. Enter programming mode (LED flashing)
2. Press # key, wait for double 'BEEP' tone
3. Once again press # key, wait for double 'BEEP' tone
4. Press # key 7 times, wait for five time 'BEEP' tone
5. Unit will reset to default setup, only Master Code will not change

Setting the lock time

1. Enter programming mode (LED flashing)
2. Enter 00 ,wait for double 'BEEP' tone
3. Enter the desired lock/relay operation time in a two digit format (01 to 99)
4. Confirmation - Triple 'BEEP' tone sounds

CVK Keypad - programming



 **ATTENTION**

Factory Default Master Code is *1234
Flashing LED indicates programming mode
Press * to exit programming mode

Change Master Code

1. With the power off press and hold down * key
2. Connect power and continuous tone sounds
3. When the tone stops release the * key, wait 5 sec. for single 'BEEP' then enter new 4 digit Master Code
4. A five 'BEEP' confirmation tone sounds after new Master Code is entered..

Entering programming mode

1. Press * wait for double 'BEEP' tone, enter Master Code
2. Confirmation-Triple 'BEEP' tone sounds, LED start flashing
3. Press * to exit programming mode

Adding user codes

1. Enter programming mode (LED flashing)
2. Enter the location 01 to 40 (31-40 are latching locations) wait for double 'BEEP' tone
3. Enter the desired 4 digit User Code
4. Confirmation - Triple 'BEEP' tone sounds
5. To add more users follow points 1 to 4 or simply press * to exit programming mode

Delete a user directly

1. Enter programming mode (LED flashing)
2. Enter the location 01 to 40, wait for double 'BEEP' tone
3. Press # key to delete this location
4. Confirmation - Triple 'BEEP' tone sounds

Delete a code directly

1. Enter programming mode (LED flashing)
2. Press # key, wait for double 'BEEP' tone
3. Enter 4 digit User Code you want delete
4. Confirmation - Triple 'BEEP' tone sounds

Delete all codes

1. Enter programming mode (LED flashing)
2. Press # key, wait for double 'BEEP' tone
3. Once again press # key, wait for double 'BEEP' tone
4. Press # key 7 times, wait for five time 'BEEP' tone
5. Unit will reset to default setup, only Master Code will not change

Setting the lock time

1. Enter programming mode (LED flashing)
2. Enter 00 ,wait for double 'BEEP' tone
3. Enter the desired lock/relay operation time in a two digit format (01 to 99)
4. Confirmation - Triple 'BEEP' tone sounds