



DC50/60 Keypad - Quick Start Guide

1 Set a user code

To set the user code you have to enter programming mode.
To enter programming mode you need to use a Master Code.

Enter

0 0 0 0 *
FACTORY SET MASTER CODE

Use your own master code if the factory set code was changed

8 9 0 0 #
SINGLE USER MODE CODE

Use this setup if you need max. 2 users operating the keypad
Single user mode is factory set default mode.

1 X X X X #
SET USER CODE 1

1 is the location for the first user code **X X X X**
is to confirm.

Exit programming mode.

2 Change the lock relay time 01-99 seconds

0 0 0 0 *
FACTORY SET MASTER CODE

Use your own master code if the factory set code was changed

4 0 X X #
OPERATING TIME

4 0 is the location for the first lock relay
X X is the operating time you set to operate the lock relay
is to confirm.

Exit programming mode.

3 Change the factory set Master Code to your own Master Code

0 0 0 0 *
FACTORY SET MASTER CODE
0 X X X X #
SET MASTER CODE

Use your own master code if the factory set code was changed

0 is the location for the Master Code **X X X X**
is to confirm.

Exit programming mode.

INDC50/60QS 20090601

Tel : 0208 621 6210

Unit 1, AMC Business Park

Fax : 0208 621 6211


12 Cumberland Ave, Park Royal

WEB : www.doentrydirect.com

London, NW10 7QL

**Door Entry
Direct**

Connecting DC50M to door entry 4D DC50M

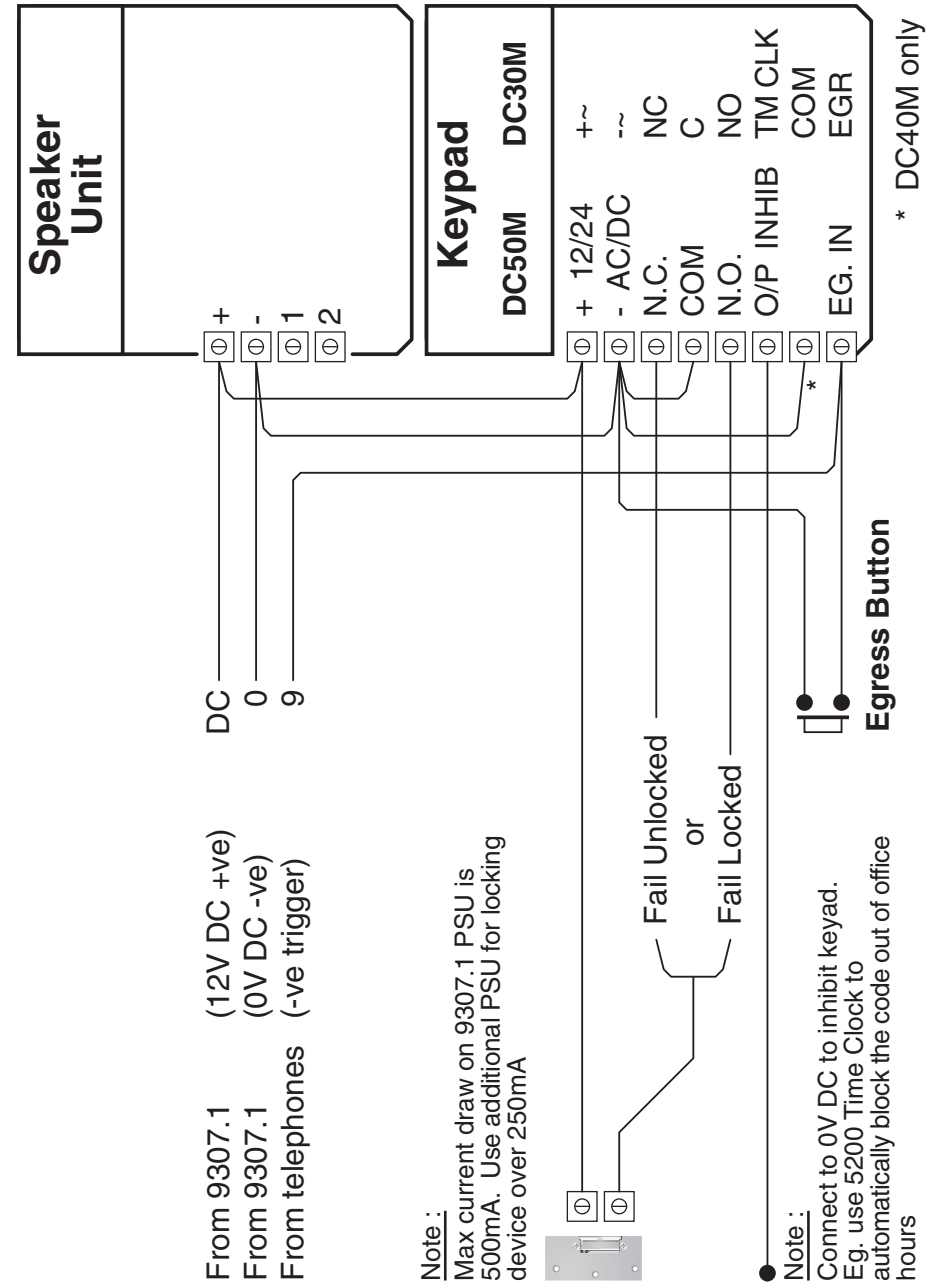

Tel : 0208 621 6210

Unit 1, AMC Business Park

Fax : 0208 621 6211

12 Cumberland Ave, Park Royal

WEB : www.doentrydirect.com

London, NW10 7QL

**Door Entry
Direct**