 


Outdoor station SD-880D1001

Infrared LEDs
Let you see clearly even at night.




Fore view

Camera
Pick up the image of the visitor clearly.

Speaker
Broadcast the voice from the host

Call button
Chime "ding dong" sound can be heard from indoor monitor, when the button is pressed, the camera works simultaneously.

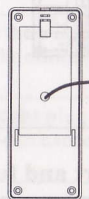

Rear view

4P LINES

Terminals function:
Brown (R1) : VIDEO
Black (R2) : GND
White (R3) : AUDIO
Red (R4) : VCC

Operation Instructions

How to operate when the monitor rings

1. Chime 'ding dong' can be heard when visitor press Call button on outdoor station.
2. Pick up the handset to communicate with visitor, Hand up to end communication and monitor can be switched off simultaneously
3. After confirmation press 'Unlock' button to release the door.
4. Auto shut down in 30 seconds, in case of nobody in the room.

Communication with the door station

1. Pick up handset and press "Monitor" button to communicate with visitor, and image appears simultaneously.
2. Hang up the handset to end communication, and monitor shut down simultaneously.

Monitor

1. Press 'Monitor' button can pick up the picture from camera.
2. Hang up the handset to switch off monitor, or shut down in 30 seconds automatically.

Inter-calling

1. Press 'Call' button of indoor monitor, inter-calling among indoor monitor available; outdoor station and screen do not work.
2. when inter-calling among indoor monitor is under using, press 'Call' button of outdoor station to call indoor monitor, each indoor monitor can communicate with outdoor station.

Adjust and display time, date

1. when screen working, time and date displayed at the bottom of screen as Year/Month/Date/Hour/Minute.
2. Press 'Time' button, minute number will twinkle, then press 'Play' button to adjust minute; press 'Time' again, Hour number will twinkle, press 'Play' to adjust hour; and so on and so forth, to adjust year, month etc.

3. Press 'Time' button once more to finish the setting.

Picture memory

1. When indoor monitor called by outdoor station, one picture is memoried after two chime 'ding dong' sound. At the top of screen, words 'PXX' displayed, 'XX' means the number of picture. E.g. the number of first picture is P01.
2. The current time and date will be also recorded in the same picture.
3. The max capacity of memory kit is 32 pictures. P01 picture will be auto replaced by P32 picture. The last 32 pictures are memoried.

Play

Press 'Monitor' button, the screen start to works, then press 'Play' button, the last picture will be displayed. Press 'Play' button one more time, for page-up.

Browse the pictures in the memory kit.

1. When screen running, press 'Play' button for more than 3 seconds, picture displayed continuously, 3 or 4 pictures will be displayed in one second.
2. When power off, memory pictures will be cleaned, time and date should to be readjust.

Setting

Press 'set/mode' button, setting light on indicates auto-recording function is available. Press 'set/mode' button again, light off indicates the quit of recording function.

Manual recording function

Press 'Record' button, current image from camera will be recorded.

Wiring:

1. For single monitor wiring please see diagram (1) or (2), and (3) or (4) for connecting multiple monitoring stations.
2. For clearer picture, please use 75Ohm coaxial cable for connecting terminal R1(VIDEO) and R2(GND) between outdoor station and indoor monitor.
3. This system will be operational without the electric door strike installed.
4. If only one indoor monitor used with outdoor station, set on the image impedance matching switch to 75Ohm, if more than one indoor monitor is used, only set on the last indoor monitor to 75Ohm, turn all others OFF.

(1) Normal type (power by monitor)

