

VRK Series System Operation Guide



Call buttons

Press the appropriate button and wait for a reply. A reassurance tone will be heard.

Trades button (optional)

For Postman and deliveries. Press and hold during the allocated time to unlock the door.

Microphone

Speaker

801 Audio Telephone



Key button

This button opens the calling entrance